





Übersicht

An/Aus und Einstellung LED Anzeige Ext. Trigger Mikrofon
Eingang

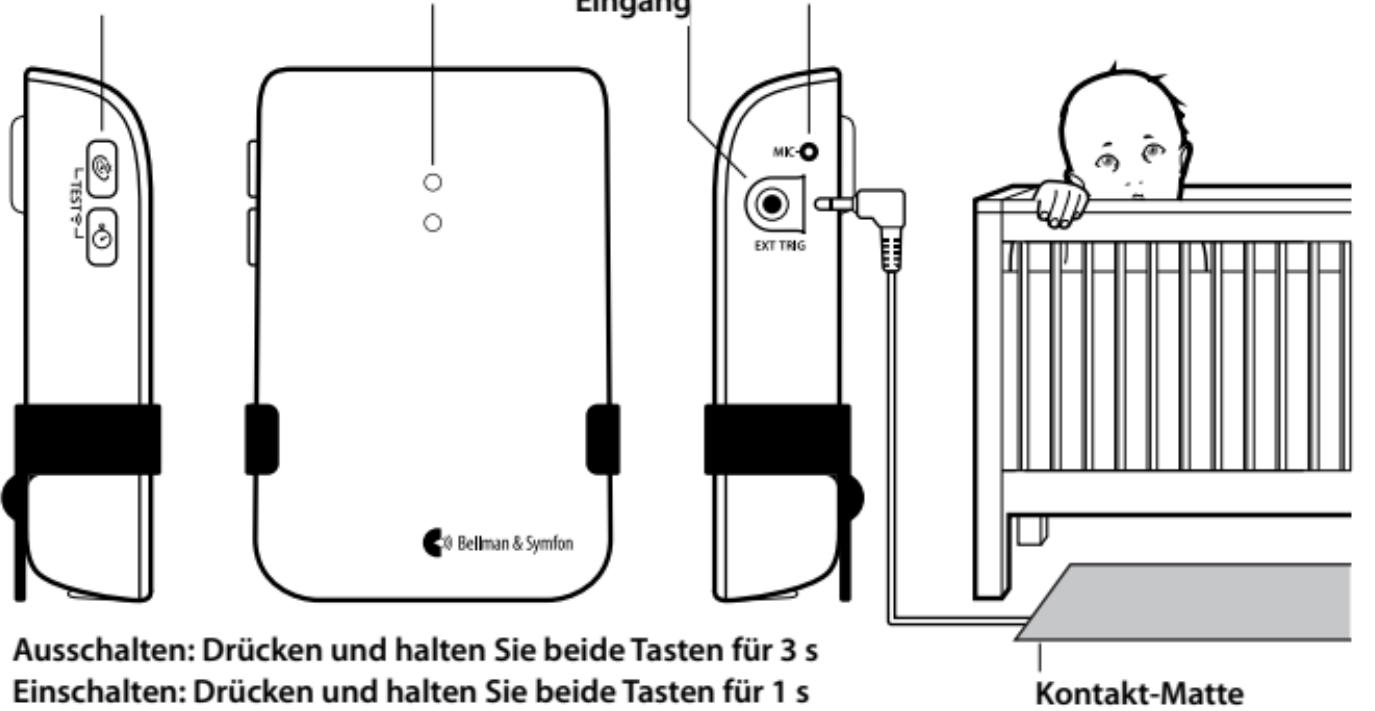


Installation

- 1 Ziehen Sie am Batterie Streifen um den Babyruf-Sender zu aktivieren.
- 2 Stellen Sie den Babyruf-Sender auf dem Nachttisch oder hängen Sie ihn mit der Schraube an die Wand. Der empfohlene Abstand ist 0,5 bis 2 m, außerhalb der Reichweite des Kindes.

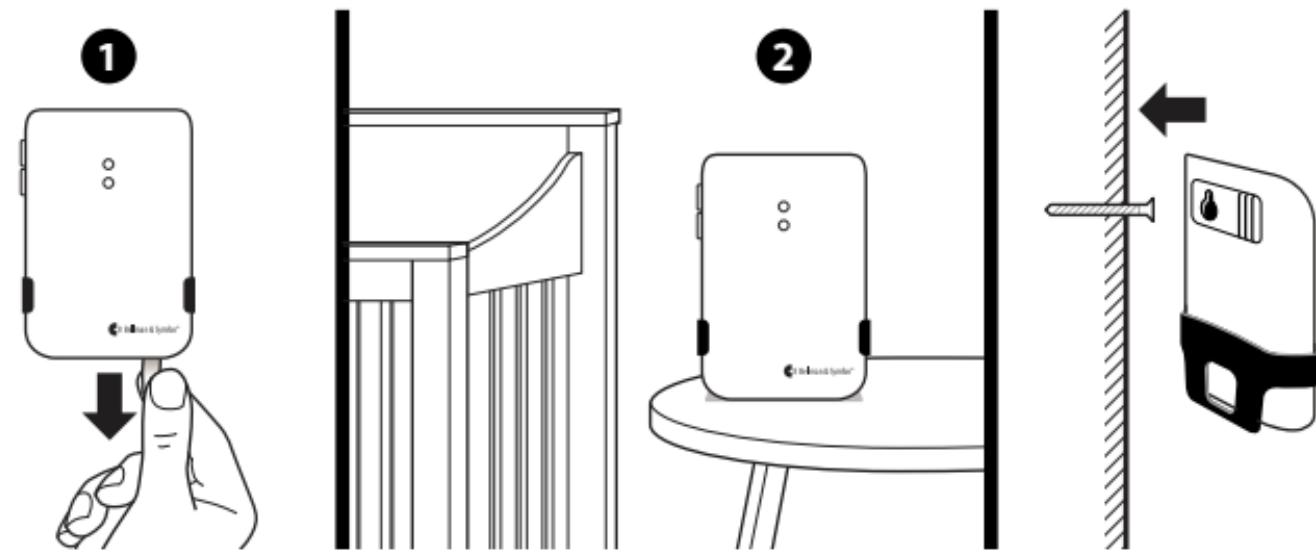

Testen

- 1 Stellen Sie sich an das Bett des Kindes und machen Lärm.
- 2 Am Visit Empfänger leuchtet einen Schnuller Symbol auf und benachrichtigt mit Ton, Licht oder Vibrationen (je nach Empfänger). Wenn er nicht reagiert, lesen Sie den Abschnitt **Settings**.

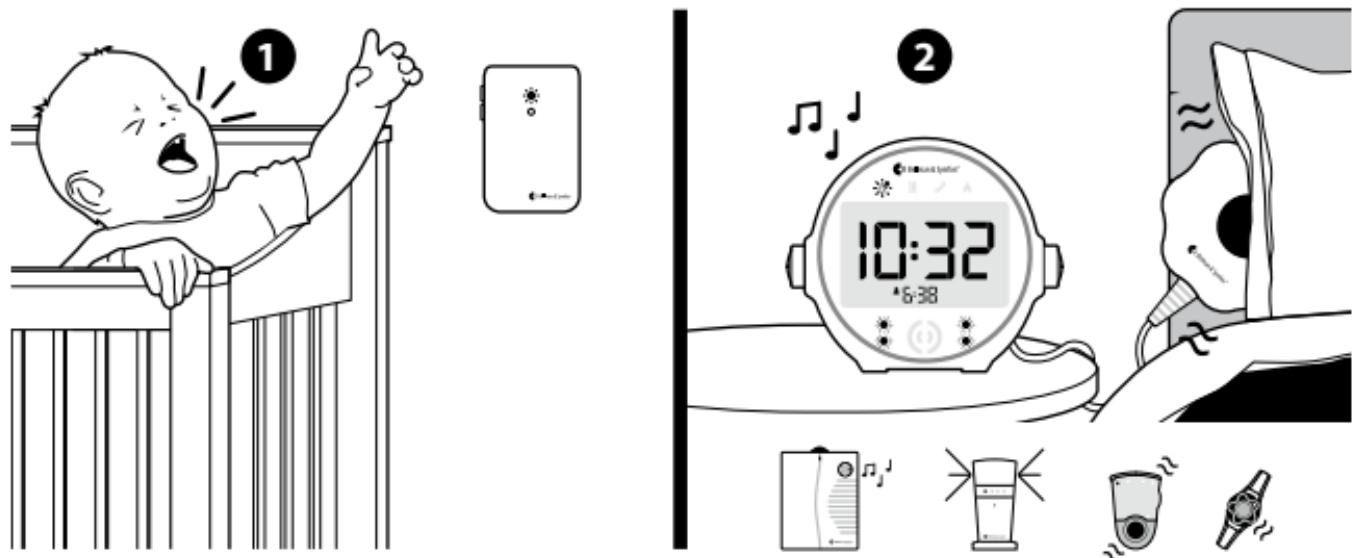

Einstellungen

Die Tasten für die Empfindlichkeit und Verzögerung sind auf der linken Seite des Babyruf-Senders. Wenn Sie die Taste drücken, zeigt die LED die aktuelle Einstellung. Drücken Sie mehrmals, um die Einstellung anzupassen.


- Wenn der Babyruf-Sender nicht auslöst, wenn das Baby schreit – erhöhen Sie die Empfindlichkeit.
- Wenn der Babyruf-Sender zu leicht auslöst - reduzieren Sie die Empfindlichkeit.
- Wenn der Babyruf-Sender zu schnell oder zu langsam aktiviert wird – variieren Sie die Einstellung der Verzögerung.

Empfindlichkeit

| | | |
|--|------------|---------|
| | Rote LED | Hoch |
| | Orange LED | Normal |
| | Grüne LED | Niedrig |


Verzögerung

| | | |
|--|------------|------|
| | Rote LED | 30 s |
| | Orange LED | 10 s |
| | Grüne LED | 1 s |

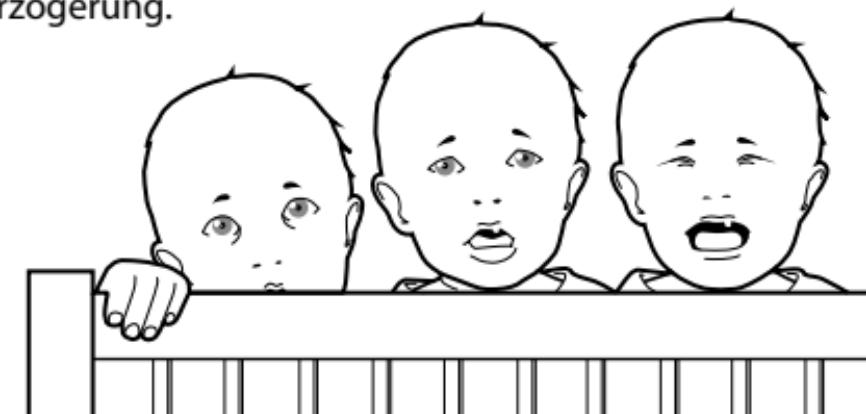

Installieren einer Kontaktmatte

Durch die Verwendung einer Kontaktmatte können Sie auch benachrichtigt werden, wenn Ihr Kind aus dem Bett steigt. Legen Sie einfach die Matte vor das Bett, verbinden Sie diese mit dem Babyruf-Sender und es wird signalisiert, wenn Ihr Kind aufsteht.

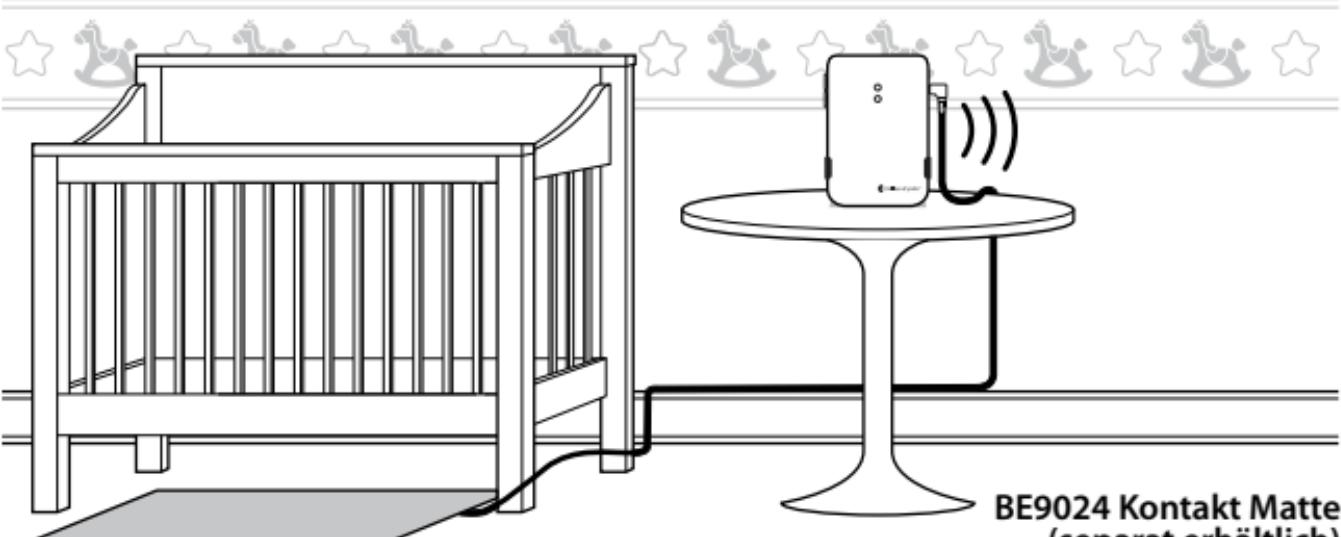

Technische Information

| | |
|---------------------------------|---|
| Stromversorgung | Batterieleistung : 2 x 1,5 V AA (LR6) Lithium oder Alkali-Batterien. |
| Leistungsaufnahme | Aktiv < 70 mA, inaktiv < 400 µA |
| Betriebsdauer | Alkali ~ 6 Monate, Lithium ~1 Jahr |
| Aktivierung | Über Testknopf, Mikrofon oder eine Kontaktmatte über ext. Trigger |
| Funkfrequenz | 315 MHz, 433,92 MHz oder 868,3 MHz je nach Region |
| Reichweite | Von 50 bis 250 m, je nach Funkfrequenz. Die Reichweite wird durch Wände, große Objekte und andere Funksender reduziert. |
| Anzahl der Funkschlüssel | 64 als Standard. Bis zu 256 mit optionaler Software. |

Zusätzliche Informationen

| | |
|------------------------------------|--|
| Beachten Sie | ! Stellen Sie den Babyruf-Sender niemals in die Wiege, Bett oder Kinderlaufstall des Kindes. |
| Verwendung und Lagerung | Nur für den Innenbereich. Temp.: 15° - 35°C. Luftfeuchtigkeit: 5% - 95%. |
| Wartung und Reinigung | Wartungsfrei. Reinigung mit einem nur leicht feuchten Tuch. |
| Sicherheit und Vorschriften | Nicht für den Wiedereinsatz durch andere Personen vorgesehen. |
| Service und Support | Informationen zu Sicherheit und Vorschriften finden Sie im Installer's Guide . Informationen zu Service und Support finden Sie im Installer's Guide . |



Installer's Guide

77 Introduction

79 Installation

81 Testing

83 Settings

84 Default indication and signals

85 Customizing the signal

89 Trouble shooting

91 Technical information

Introduction

Function

The baby monitor is part of the Visit alerting system that helps people with hearing loss to notice signals in their home. When your child cries, the baby monitor signals the Visit receiver that notifies you with sound, lights or vibrations (depending on the receiver). This way you are always close to your baby.

Activation


The baby monitor can be activated by either:

- The test buttons (press simultaneously)
- The built-in microphone
- The BE9024 Contact mat accessory (connected to the Ext trig input)

Settings


The baby monitor allows you to adjust the sensitivity and delay and you can set a unique signal for each child, so you know who needs your attention.

Overview

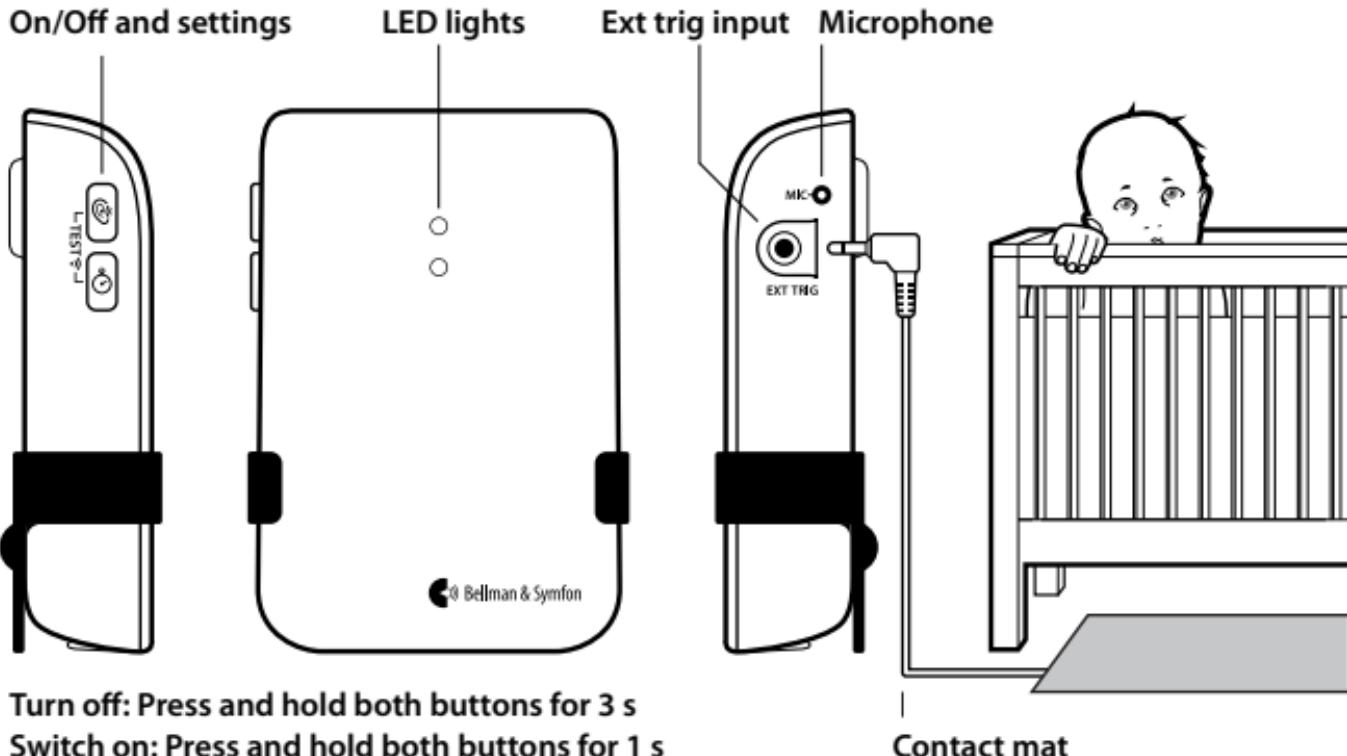


Installation

- 1 Remove the battery pull tab to start the baby monitor.
- 2 Place the baby monitor on the nightstand or hang it on the wall with the screw and plug. The recommended distance is 0.5 - 2 m, out of reach from the child.

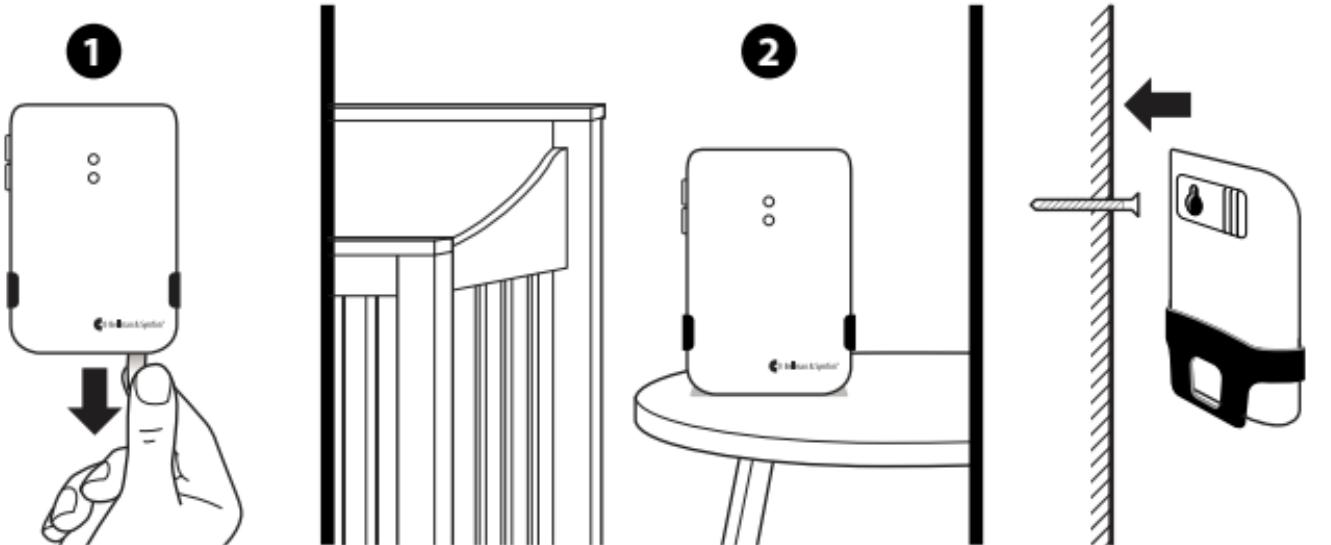

Installing a contact mat


By using a contact mat, you can also be notified if your child gets out of bed. Just place the mat in front of the crib, connect it to the baby monitor and it will tell you when your child steps on it.

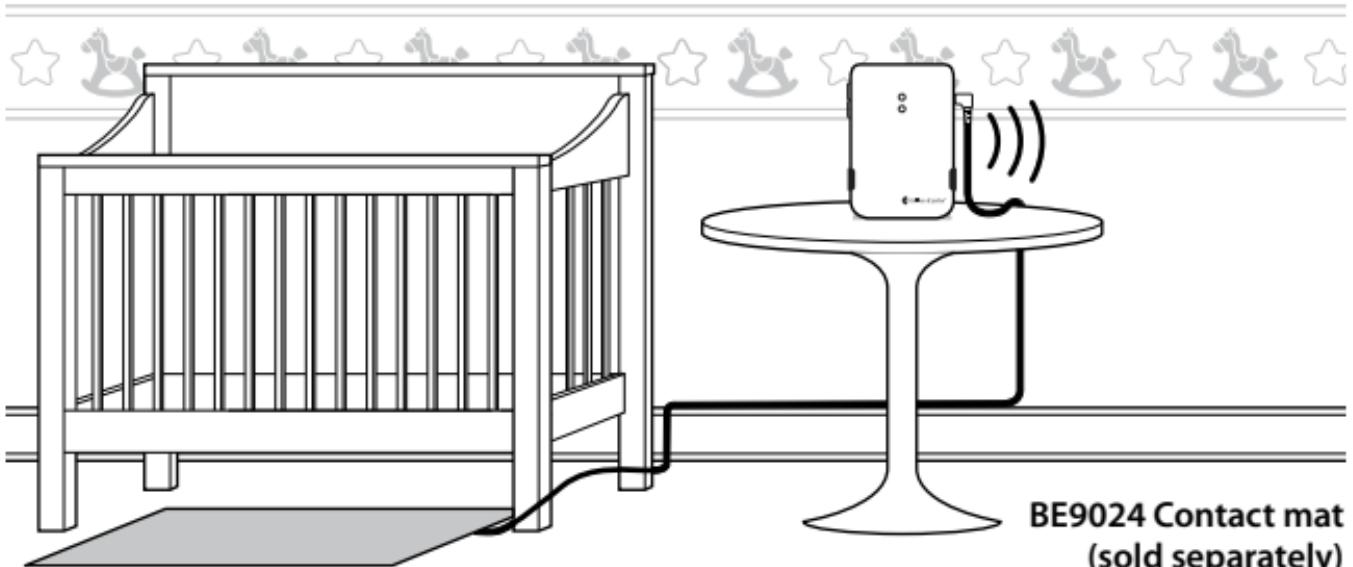

BE9024 Contact mat
(sold separately)

Testing

- 1 Stand by the child's bed and make a noise.
- 2 The Visit receiver lights up a pacifier symbol and indicates with sound, lights or vibrations (depending on the receiver). If it doesn't react, read the section Advanced testing.

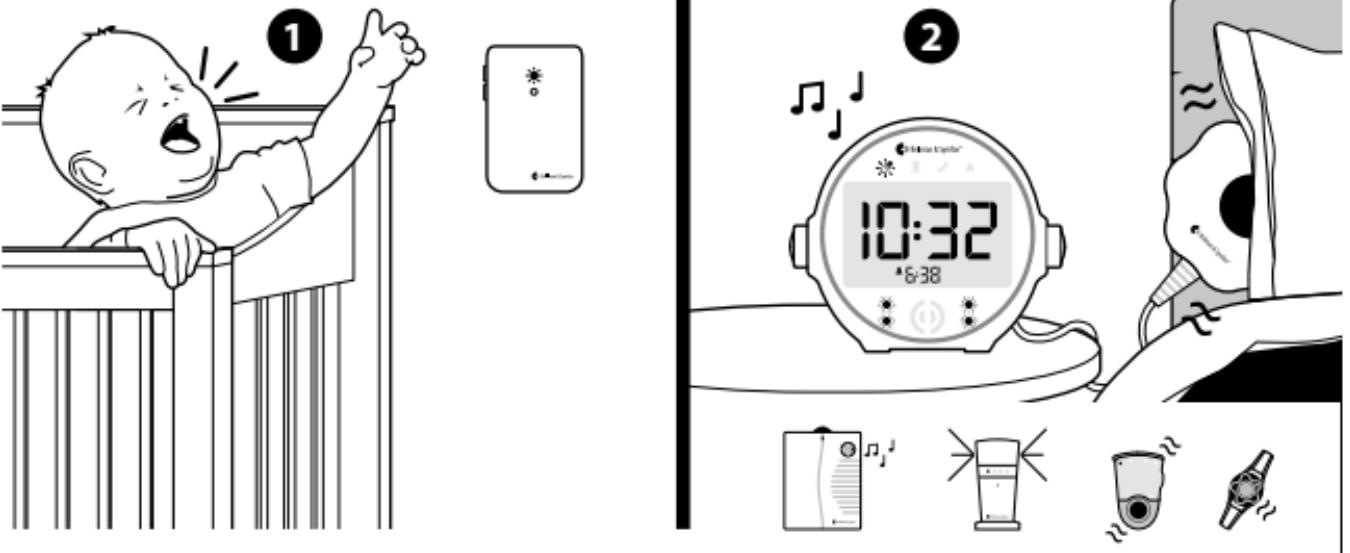

Advanced testing

Testing the baby monitor is easy. First, make sure that the baby monitor is installed properly. For instructions, read the section **Installation**.

Using the test button

Press both test buttons simultaneously.

- 1 The baby monitor's LED lights up to show that a radio signal is transmitted.
- 2 The receiver's pacifier symbol lights up to show that the signal was received.

Using the microphone

Activate the baby monitor by whistling or speaking into the microphone.

- 1 The baby monitor's LED lights up to show that a radio signal is transmitted.
If you have adjusted the delay, it will be postponed as shown on page 83.
- 2 The receiver's pacifier symbol lights up to show that the signal was received.
If you have customized the signal pattern, it will blink as shown on page 85.

If it doesn't work as described, read the section **Troubleshooting**.

Settings

The buttons for sensitivity and delay are located on the baby monitor's left side. When you press the button, the LED shows the current setting. Then press repeatedly to adjust the setting.

- If the baby monitor isn't activated when the baby cries – increase the sensitivity.
If the baby monitor is activated too easily – reduce the sensitivity.
- If the baby monitor is activated too fast or too slow – adjust the delay.




Sensitivity

| | |
|------------|--------|
| Red LED | High |
| Orange LED | Medium |
| Green LED | Low |



Delay

| | |
|------------|------|
| Red LED | 30 s |
| Orange LED | 10 s |
| Green LED | 1 s |

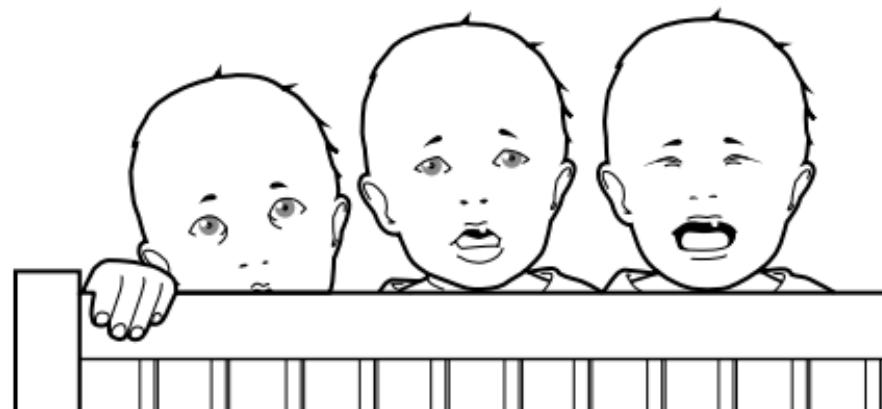

Default indication and signal

Transmitter indication

When the baby monitor is activated, the LED indicator lights up in green. This means that the batteries are in good condition. Change batteries if the LEDs blink in orange. Only use 1.5 V AA (LR6) lithium or alkaline batteries.

Receiver signal


When a receiver is activated, it signals with sound, flashes or vibrations. The default signal pattern is as follows:

Signal pattern 868/315 MHz 433 MHz

| Transmitter | | Receiver | | | |
|-------------|---------------|----------|-------------------|---------------|-------|
| Source | LED | LED | Sound | Vibration | Flash |
| Baby | Green, top | Orange | Baby melody | Rapid pattern | Yes |
| Contact mat | Green, bottom | Green | 1 x ding dong, Lo | Slow pattern | Yes |
| Baby | Green, top | Orange | Baby melody | Slow pattern | Yes |
| Contact mat | Green, bottom | Green | 1 x ding dong, Lo | Slow pattern | Yes |

Customizing the signal

The baby monitor controls the signal pattern on the receiver. By moving a signal switch **A** up=on you can set a unique signal for each baby. Note that you need to move the other switches down.

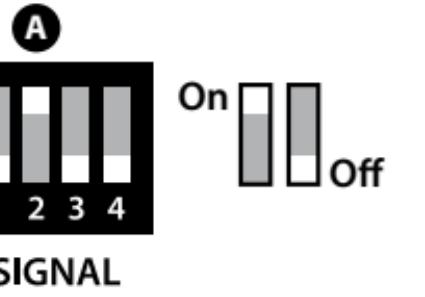


Signal pattern 868/315 MHz 433 MHz

| Source | Switch | LED | Sound | Vibration | Flash |
|--------|--------|--------------------|--------------|---------------|-------|
| Baby 1 | 1 | Orange light | Baby melody | Rapid pattern | Yes |
| Baby 2 | 2 | 2 x orange blink | Baby melody | Rapid pattern | Yes |
| Baby 3 | 3 | 3 x orange blink | Baby melody | Rapid pattern | Yes |
| Baby 4 | 4 | Blinking in orange | Baby melody | Rapid pattern | Yes |
| Baby 1 | 1 | Orange light | Baby melody | Slow pattern | Yes |
| Baby 2 | 2 | Orange light | 2 x ring, Lo | Fast pattern | Yes |

Changing the radio key

If you install multiple systems, you can set a unique radio key for each system to avoid interference. Move any radio key switch **B** to the up=on position to change radio key.


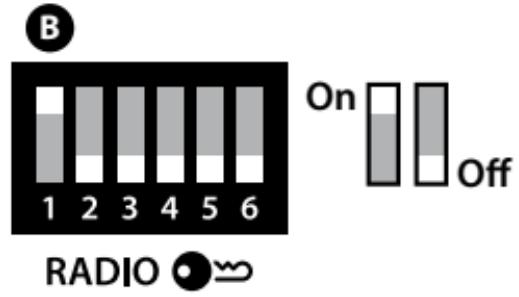


Please note



All Visit products within the same system must be set to the same radio key in order to operate as a group.

All Visit products are set to the same radio key from factory and all radio key switches are positioned down=off per default.

Signal output for 868 MHz and 315 MHz
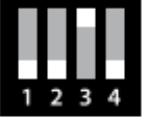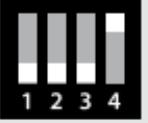
| Dip switch | Output | Test button 1 or 2 Internal Mic | External trigger |
|--|-----------|------------------------------------|--------------------|
|  1 2 3 4 | Light | Orange light | Green light |
| | Vibration | Rapid pattern | Slow pattern |
| | Sound | Baby melody | 1 x ding dong, Lo |
|  1 2 3 4 | Light | 2 x orange blinks | 2 x green blinks |
| | Vibration | Rapid pattern | Slow pattern |
| | Sound | Baby melody | 2 x ding dong, Lo |
|  1 2 3 4 | Light | 3 x orange blinks | 3 x orange blinks |
| | Vibration | Rapid pattern | Rapid pattern |
| | Sound | Baby melody | Baby melody |
|  1 2 3 4 | Light | Blinking in orange | Blinking in orange |
| | Vibration | Rapid pattern | Rapid pattern |
| | Sound | Baby melody | Baby melody |

Signal output for 433 MHz
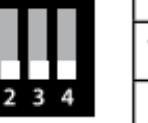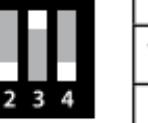
| Dip switch | Output | Test button 1 or 2 Internal Mic | External trigger |
|--|-----------|------------------------------------|-------------------|
|  1 2 3 4 | Light | Orange light | Green light |
| | Vibration | Slow pattern | Slow pattern |
| | Sound | Baby melody | 1 x ding dong, Lo |
|  1 2 3 4 | Light | Orange light | Green light |
| | Vibration | Fast pattern | Fast pattern |
| | Sound | 2 x ring, Lo | 1 x ring, Hi |
|  1 2 3 4 | Light | Orange light | Orange light |
| | Vibration | Slow pattern | Slow pattern |
| | Sound | 2 x ding dong, Lo | 2 x ding dong, Lo |
|  1 2 3 4 | Light | Orange light | Orange light |
| | Vibration | Slow pattern | Slow pattern |
| | Sound | Baby melody | Baby melody |

Trouble shooting

| If | Try this |
|--|--|
| Two orange lights appear every 10s | <ul style="list-style-type: none">Change the batteries. Only use 1.5 V AA (LR6) lithium or alkaline batteries. |
| A green light appears on the baby monitor but the receiver is not activated | <ul style="list-style-type: none">Check the baby monitor's and the receiver's batteries and plugs.Move the receiver closer to the baby monitor.Check that the baby monitor and the receiver are set to the same radio key. For more information, read the section Changing the radio key. |
| The baby monitor is not activated even though the baby is crying | <ul style="list-style-type: none">Move the baby monitor closer to the baby or increase the microphone's sensitivity, see Settings.Please note: Always make sure the baby monitor is out of the child's reach. Never place the baby monitor in the child's crib or playpen. |

| If | Try this |
|---|--|
| The baby monitor is activated too easily | <ul style="list-style-type: none">Reduce the sensitivity or move the baby monitor further away from the crib, see Settings. |
| The baby monitor is activated too fast | <ul style="list-style-type: none">Increase the delay. For more information, read the section Settings. |
| The baby monitor is activated too slow | <ul style="list-style-type: none">Reduce the delay. For more information, read the section Settings. |
| The receiver is activated for no reason | <ul style="list-style-type: none">There is probably another Visit system nearby that triggers your system. Change the radio key on all units, see Changing the radio key. |

Technical information

| | |
|-----------------------------|--|
| Power supply | Battery power: 2 x 1.5 V AA (LR6) lithium or alkaline batteries. |
| Power consumption | Active < 70 mA, Idle position < 400 µA |
| Operating time | Alkaline ~ 6 months, Lithium ~ 1 year |
| Activation | Via the test buttons, microphone or a contact mat via the ext trig |
| Radio frequency | 315 MHz, 433.92 MHz or 868.3 MHz depending on region |
| Coverage | 50 - 250 m depending on radio frequency. Coverage is reduced by walls, large objects and other radio transmitters. |
| Number of radio keys | 64 as standard. Up to 256 with optional software. |

Additional information

| | |
|---------------------------------|---|
| Security | Always make sure the baby monitor is out of the child's reach. Never place the baby monitor in the child's crib or playpen. |
| Usage and storage | For indoor use only. Temperature: 15°- 35° C. Rel. humidity: 5% - 95%. |
| Maintenance and cleaning | Maintenance free. Clean with a dry cloth. Don't use household cleaners, aerosol sprays, solvents, alcohol, ammonia, or abrasives. Not reusable. |
| Warranty and service | If your baby transmitter appears to be damaged or doesn't function properly, follow the advice in this booklet and the online resources. If it still doesn't function properly, contact your retailer for information about obtaining warranty service. |



FCC compliance statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment gener-

ates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an expe-

rienced radio/TV technician for help.

For a complete Declaration of Conformity please contact the Bellman & Symfon European office.

Industry Canada statement

This device complies with Industry Canada Licence-exempt RSS-210. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must

European office

Bellman & Symfon Europe AB
Södra Långbergsgatan 30
421 32 Västra Frölunda
Sweden
Phone: +46 31 68 28 20
E-mail: info@bellman.com

accept any interference, including interference that may cause undesired operation of the device.

Le fonctionnement de cet équipement est soumis aux conditions suivantes:

(1) l'équipement concerné ne doit pas causer d'interférences, et (2) il doit accepter toute interférence reçue, y compris les interférences risquant d'engendrer un fonctionnement indésirable. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This Class B digital a paratus complies with the Canadian ICES-003.

Zusätzliche Information

Nur Innen verwenden. Wartungsfrei. Reinigung mit einem nur leicht feuchten Tuch.

HMV 16.99.09.0045

Asia Pacific office

Bellman & Symfon Asia Ltd.
1115-16, Main Tower, Int'l Hotel
339 Huanshi Dong Rd
Guangzhou, China, 510095
Phone: +86 20 8318 2950
E-mail: info.cn@bellman.com

DESIGN FOR EARS™



bellman.com

BE1491_049MAN005